



|  |   |                |              |             |  |             |            |
|--|---|----------------|--------------|-------------|--|-------------|------------|
| 22   | 4 | Washer         | Bricka       |             |  |             | 05-02-101  |
| 21   | 4 | Screw          | Skruv        |             |  |             | 05-04-128  |
| 20   | 5 | Screw          | Skruv        |             |  |             | 05-04-46   |
| 19   | 1 | Screw          | Skruv        |             |  |             | See table  |
| 18   | 2 | Plug           | Plugg        |             |  |             | 05-03-122  |
| 17   | 1 | Key            | Nil          |             |  |             | 05-03-124  |
| 16   | 2 | Retaining ring | Låsnng       |             |  |             | 05-34-108  |
| 15   | 1 | Retaining ring | Låsnng       |             |  |             | 05-34-118  |
| 14   | 2 | Ball bearing   | Kullager     |             |  |             | 05-08-504  |
| 13   | 1 | Mech. seal     | Mek. tätning |             |  |             | 05-20-118  |
| 12   | 1 | V-ring         | V-ring       |             |  |             | 05-19-505  |
| 11   | 1 | Lip seal       | Läpp tätning |             |  |             | 05-29-118  |
| 10   | 1 | Spacer         | Distans      |             |  |             | 01-42747   |
| 9  | 1 | Pedestal       | Lagerfot     |             |  |             | 01-13020   |
| 8  | 1 | Wear plate     | Slitbricka   |             |  |             | 01-42423   |
| 7  | 1 | Pin            | Stift        |             |  |             | 01-42426   |
| 6  | 1 | Gasket         | Packning     |             |  |             | 01-42424   |
| 5  | 1 | Impeller       | Impeller     |             |  |             | See table  |
| 4  | 1 | Cam            | Kam          |             |  |             | See table  |
| 3  | 1 | Shaft          | Axel         |             |  |             | 01-35137   |
| 2  | 1 | End cover      | Lock         |             |  |             | 01-42422-1 |
| 1  | 1 | Body           | Pumphus      |             |  |             | See table  |
| Pos. Qty. Description Material Dimension Drawing nr. |   |                |              |             |  |             |            |
| Pump No. 10-13026                                    |   |                |              | Material    |  | Drawing nr. |            |
| Pump No. 10-13026                                    |   |                |              | Drawing nr. |  | Drawing nr. |            |
| Pump No. 10-13026                                    |   |                |              | Drawing nr. |  | Drawing nr. |            |
| Pump No. 10-13026                                    |   |                |              | Drawing nr. |  | Drawing nr. |            |

| PUMP NO       | PUMPTYPE | DESCRIPTION | THICKNESS | NR       | SCREW     | IMPELLER | BODY       | THREAD  |
|---------------|----------|-------------|-----------|----------|-----------|----------|------------|---------|
| FOR REPAIRING | PUMPTYP  | BENÄMNING   | TJOCKLEK  | NR       | SÄRV      | B        | PUMPHUS    | LÅSNING |
| 01-13026-1    | F9B-3000 | V1          | 8         | 01-43137 | 05-04-108 | 08-802 B | 01-13026-1 | R 7"    |
| 01-13026-2    | F9B-3000 | V2          | 5,2       | 01-43138 | 05-04-107 | 08-804 B | 01-13026-1 | R 7"    |
| 01-13026-3    | F9B-3000 | V3          | 8         | 01-43137 | 05-04-108 | 08-804 B | 01-13026-1 | R 7"    |
| 01-13026-4    | F9B-3000 | V4          | 5,2       | 01-43138 | 05-04-107 | 08-804 B | 01-13026-1 | R 7"    |
| 01-13026-5    | F9B-3000 | V5          | 8         | 01-43137 | 05-04-108 | 08-802 B | 01-13026-2 | R 7"    |
| 01-13026-6    | F9B-3000 | V6          | 5,2       | 01-43138 | 05-04-107 | 08-804 B | 01-13026-2 | R 7"    |
| 01-13026-7    | F9B-3000 | V7          | 8         | 01-43137 | 05-04-108 | 08-802 B | 01-13026-2 | R 7"    |
| 01-13026-8    | F9B-3007 | V8          | 5,3       | 01-43135 | 05-04-107 | 08-814 E | 01-13026-2 | R 7"    |
| 01-13026-9    | F9B-3007 | V9          | 2         | 01-43136 | 05-04-108 | 08-814 E | 01-13026-2 | R 7"    |
| 01-13026-10   | F9B-3007 | V10         | 5,3       | 01-43135 | 05-04-107 | 08-814 E | 01-13026-2 | R 7"    |
| 01-13026-11   | F9B-3007 | V11         | 5,3       | 01-43135 | 05-04-108 | 08-814 E | 01-13026-2 | R 7"    |
| 01-13026-12   | F9B-3007 | V12         | 4         | 01-43138 | 05-04-107 | 08-814 E | 01-13026-2 | R 7"    |

|    |          |           |        |     |
|----|----------|-----------|--------|-----|
| 1  | 05-04-16 | 05-04-168 | 103026 | 4,5 |
| 2  | 05-04-17 | 05-04-168 | 103026 | 4,5 |
| 3  | 05-04-18 | 05-04-168 | 103026 | 4,5 |
| 4  | 05-04-19 | 05-04-168 | 103026 | 4,5 |
| 5  | 05-04-20 | 05-04-168 | 103026 | 4,5 |
| 6  | 05-04-21 | 05-04-168 | 103026 | 4,5 |
| 7  | 05-04-22 | 05-04-168 | 103026 | 4,5 |
| 8  | 05-04-23 | 05-04-168 | 103026 | 4,5 |
| 9  | 05-04-24 | 05-04-168 | 103026 | 4,5 |
| 10 | 05-04-25 | 05-04-168 | 103026 | 4,5 |