



# JABSCO<sup>®</sup> MARINE PUMPS

## Series 21140

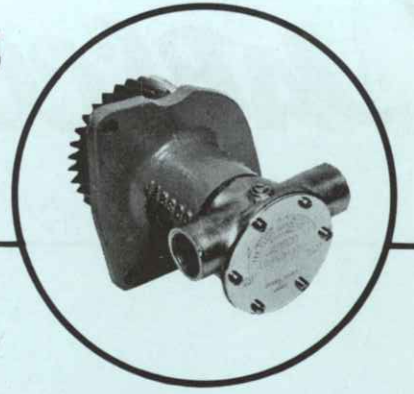

### PUMP HEAD

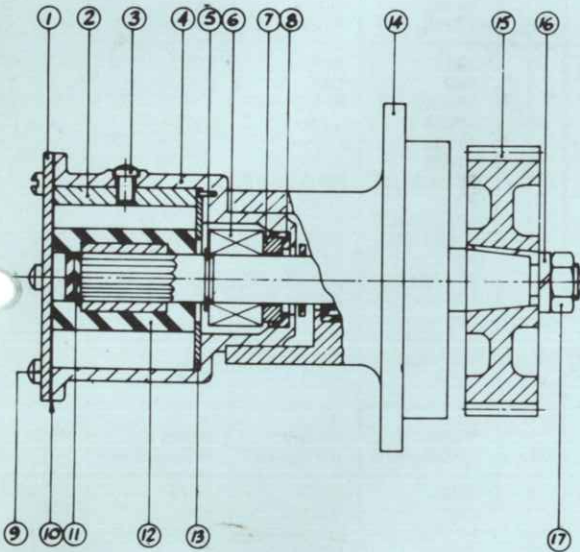


Pump Head

Key	Description	Qty	Model 21140-200	Model 21140-204	Model 21140-2101	Model 21140-2201
1	Endcover Blank	1	3993	3993	3393	3993
2	Cam	1	934	3255	934	934
3	Cam Screw	1	SP1004-09	SP1004-11	SP1004-09	SP1004-09
4	Body	1	10329-200	10329-200	10329-200	10329-200
5	Retaining Ring	1	SP1700-62	SP1700-62	SP1700-62	SP1700-62
6	Seal Assy.	1	22617-0010	22617-0010	22617-0010	22617-0010
7	Seal Seat		See Note			
8	Seal Cup		See Note			
9	End Cover Screw	6	SP1003-09	SP1003-09	SP1003-09	SP1003-09
10	Gasket	1	890	3101	890	890
11	Spline Seal	1	4345	4345	4345	4345
12	Impeller	1	920-0001	920-0001	920-0001	920-0001
13	Wearplate	1	4156	4156	4156	4156
14	Bearing Housing see below		"Bearing Housing"			
15	Gear	1	11084	11084	—	23146-0001
16	Washer	1	11085	11085	—	SP1608-01
17	Nut	1	11086	11086	—	SP1085-10

Note: Key '7' Seal Seat, key '8' Seal Cup are part of Seal Assy. 22617-0010

*10959 22540-201  
22330-201  
10959-0001*

### BEARING HOUSING

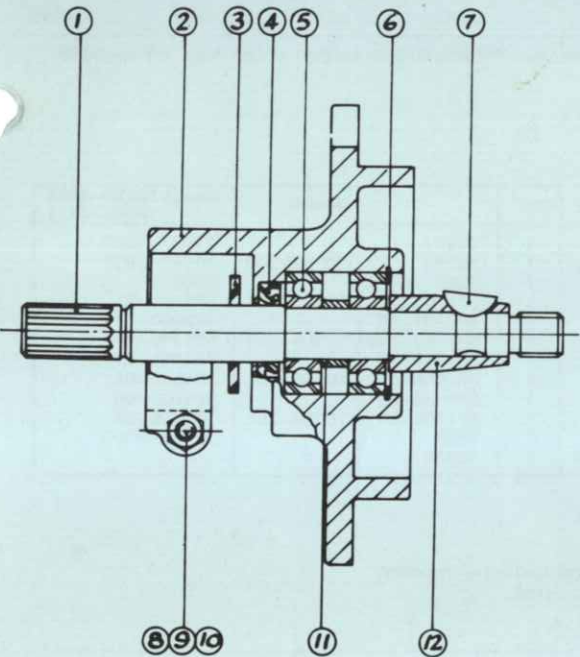

Bearing Housing

Key	Description	Qty	Part Number	Model 21140-204	Model 21140-2101	Model 21140-2201
1	Shaft	1	10957-01	10957-01	22927-0010	22927-0010
2	Bearing Housing	1	10959	10959	10959-0001	10959-0001
3	Slinger	1	3286	3286	3286	3286
4	Seal	1	SP2701-21	SP2701-21	SP2701-21	SP2701-21
5	Bearing	2	SP2601-39	SP2601-39	SP2600-01	SP2600-01
6	Retaining Ring	1	SP1700-248	SP1700-248	SP1700-250	SP1700-250
7	Key	1	SP1401-10	SP1401-10	SP1402-0171	SP1402-0171
8	Bolt	1	SP1095-09	SP1095-09	SP1095-09	SP1095-09
9	Washer	1	SP1602-06	SP1602-06	SP1602-06	SP1602-06
10	Nut	1	SP1105-03	SP1105-03	SP1105-03	SP1105-03
11	Bearing Spacer	1	9998	9998	22958-0000	22958-0000
12	Sleeve	1	10958	10958	—	—

### Service Kits

Model 21140-200, 21140-2101, 21140-2201 (SK229)

Model 21140-204 (SK229-04)

Containing seal, impeller, endcover screws, gasket.